


TE sensors

Solid current sensors

used with DIRIS Digiware I, DIRIS A-40, DIRIS B and ISOM Digiware F-60

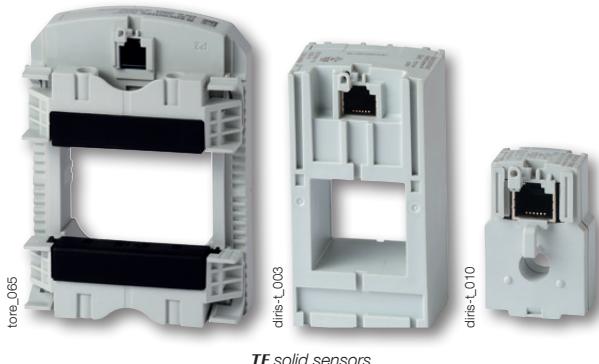

Function

TE smart **current sensors** measure the load currents of an electrical system and send the data to meters and measurement hubs via an RJ12 plug-and-play output. Thanks to a wide measurement range, TE current sensors cover the full current range of 5 to 2000 A, with 7 references. TE solid current sensors can be connected to DIRIS Digiware I, DIRIS A-40, DIRIS B and ISOM Digiware F-60 via a rapid RJ12 connection.

Numerous accessories are available to aid the installation of sensors in any type of cabinet.

Advantages

Plug & Play

- A rapid RJ12 connection makes wiring easy and reliable and prevents wiring errors. This also allows automatic detection of the sensor type and size/transformation ratio.
- The sensors can be installed in both directions.

Accuracy as per standard IEC 61557-12

- Class 0.5 for the global measuring chain (measurement hub + TE current sensors) from 2 to 120% of the nominal current I_n .

Installation

- The TE solid sensor range is specially designed for new installations, and has the same pitch as the most common protective devices.

The solution for

- Industry
- Building
- Infrastructure
- Data center



Strong points

- Plug & Play
- Accuracy as per standard IEC 61557-12
- Installation

Conformity to standards

- IEC 61557-12



- ISO 14025



- UL




Create your project


- Find the best DIRIS Digiware configuration:
www.meter-selector.com



Mounting

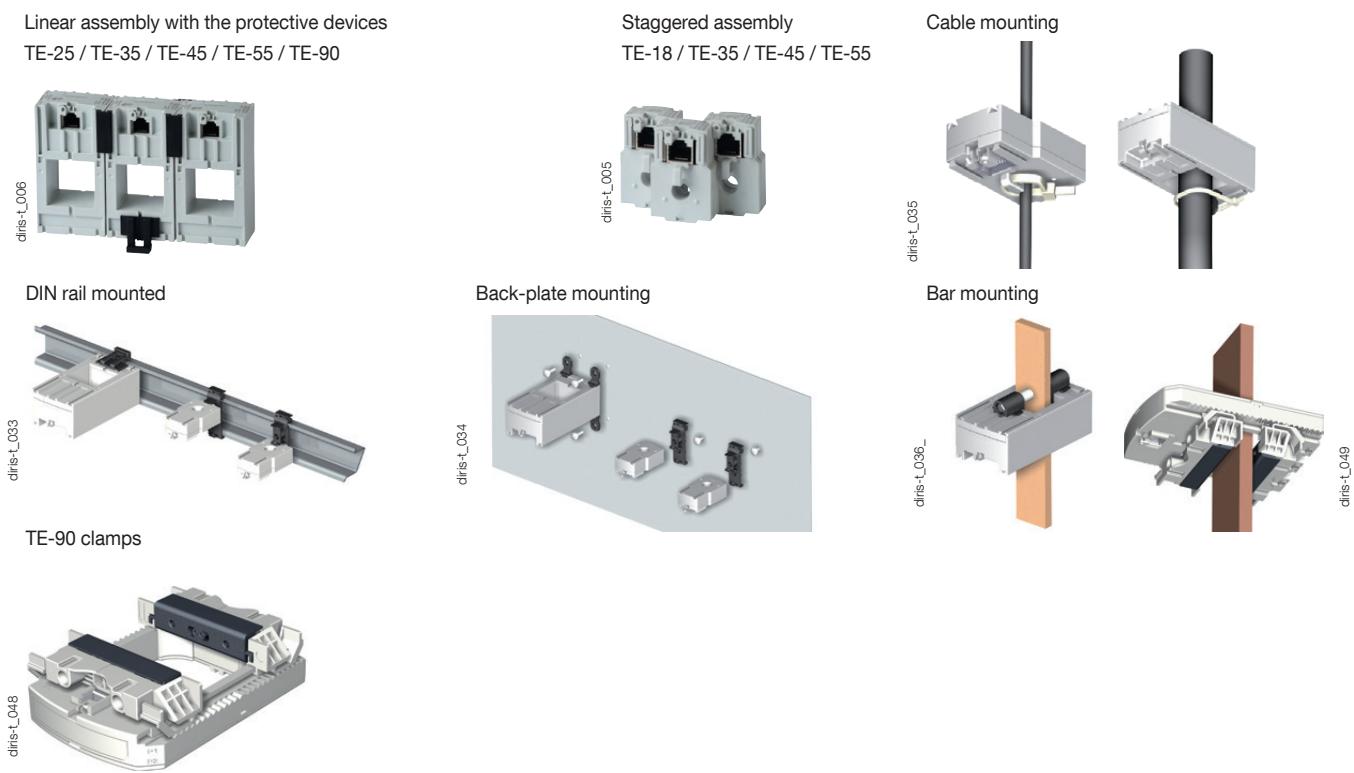

Connections

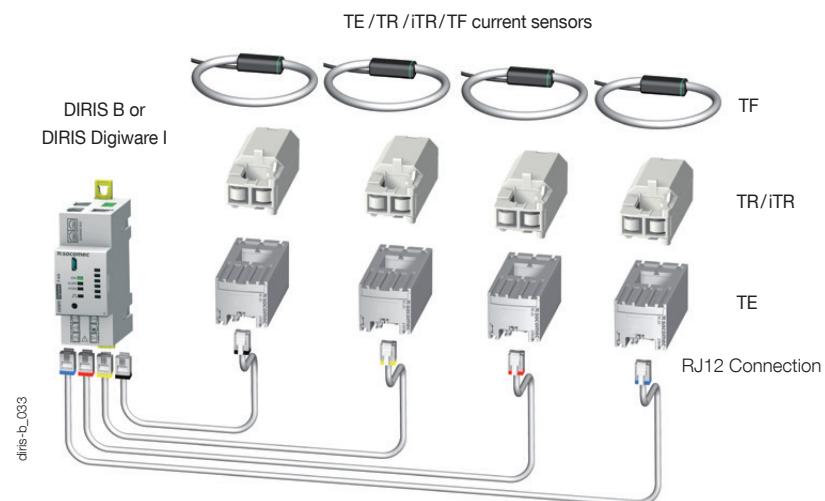

TE sensors

Solid current sensors

used with DIRIS Digiware I, DIRIS A-40, DIRIS B and ISOM Digiware F-60

Mounting accessories



Mounting accessories delivered with TE sensors:

Switch mounting	TE-18	TE-25	TE-35 TE-45 TE-55	TE-90
DIN rail and back-plate	1 pc			2 pcs
DIN rail		2 pcs	2 pcs	
Back-plate		4 pcs	4 pcs	6 pcs
Busbar			2 pcs	

diris-t_042_a - 043_a - 044_a - 045_a

Compatible accessories


Adapter for CT with 5A secondary

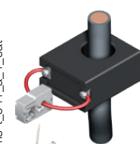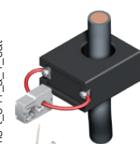

- With this adapter you can use a current transformer with a 1 A or 5 A output on DIRIS Digiware I, DIRIS B and DIRIS A-40.
- For use with 5 A CTs (measurement up to 10 000 A) or 1 A CTs (measurement up to 2000 A). The dimensions are the same as the TE-18.

Coupling link

- Associated with the TE range, this accessory is for inter-connecting the sensors when linear or staggered mounted.

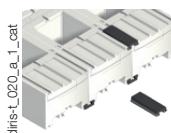

Sealable cover


- Using a sealable cover guarantees the immunity of the sensor connection on TE/TR/iTR/TF current sensors.




Dimensions (mm)

TE - Solid current sensors


TE-18

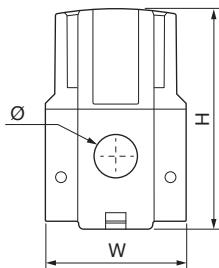

TE-25 / TE-35 / TE-45 / TE-55

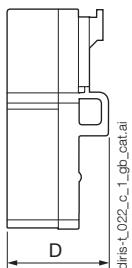

TE-90

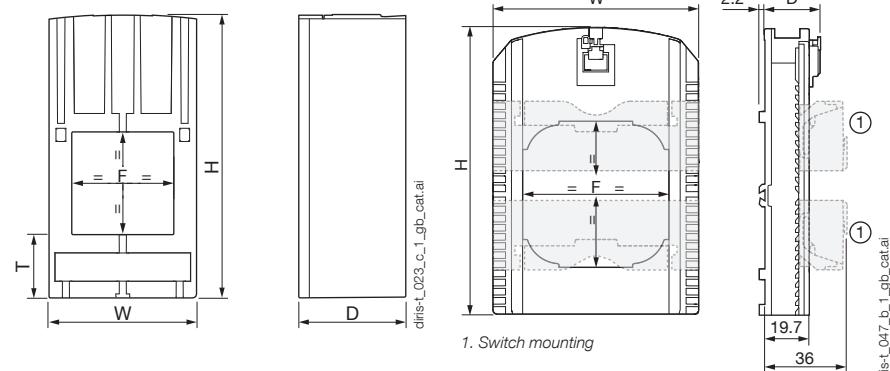

1. Switch mounting

Model	Nominal current range (A)	Real range covered (A)	Pitch (mm)	H x W x D (mm)	F (mm)	T (mm)
TE-18	5 ... 20 / 25 ... 63	0.1 ... 24 / 0.5 ... 75	18	45 x 28 x 20	8.6	-
TE-25	40 ... 160	0.8 ... 192	25	65 x 25 x 32.5	13.5 x 13.5	17.5
TE-35	63 ... 250	1.26 ... 300	35	71 x 35 x 32.5	21 x 21	17.5
TE-45	160 ... 630	3.2 ... 756	45	86 x 45 x 32.5	31 x 31	19.5
TE-55	400 ... 1000	8 ... 1200	55	100 x 55 x 32.5	41 x 41	21.5
TE-90	600 ... 2000	12 ... 2400	90	126 x 90 x 24.6	64 x 64	-

Specifications

TE - Solid current sensors

Model	TE-18	TE-18	TE-25	TE-35	TE-45	TE-55	TE-90
Nominal current range I_n (A)	5 ... 20	25 ... 63	40 ... 160	63 ... 250	160 ... 630	400 ... 1000	600 ... 2000
Real range covered (A)	0.1 ... 24	0.5 ... 75	0.8 ... 192	1.26 ... 300	3.2 ... 756	8 ... 1200	12 ... 2400
Max. current (A)	24	75.6	192	300	756	1200	2400
Weight (g)	24	24	69	89	140	187	163
Max. voltage (phase/neutral)			300 V			600 V	
Rated withstand voltage				3 kV			
Frequency				50/60 Hz			
Intermittent overload				10 $\times I_n$ over 1 sec			
Measurement category				CAT III			
Protection degree				IP30 / IK06			
Operating temperature				-10 ... +70°C			
Storage temperature				-25 ... +85°C			
Relative humidity				95% RH non-condensing			
Altitude				< 2000 m			
Connection				Socomec RJ12 cable			

References

Model	Nominal current range (A)	Real range covered (A)	Pitch (mm)	Reference
TE-18	5 ... 20	0.1 ... 24	18	4829 0500
TE-18	25 ... 63	0.5 ... 75	18	4829 0501
TE-25	40 ... 160	0.8 ... 192	25	4829 0502
TE-35	63 ... 250	1.26 ... 300	35	4829 0503
TE-45	160 ... 630	3.2 ... 756	45	4829 0504
TE-55	400 ... 1000	8 ... 1200	55	4829 0505
TE-90	600 ... 2000	12 ... 2400	90	4829 0506

Accessories		Reference
Coupling link (20 linear assembly parts and 10 for staggered assembly)		4829 0598
5 A CT adapter (max primary current 2000 A / 1 A or 10 000 A / 5 A)		4829 0599
Sealable caps (20 pieces)		4829 0600

RJ12 connection cables	Cable length (m)										
	0.1	0.2	0.3	0.5	1	2	3	5	7	10	50 m reel + 100 connectors
Number of cables	Reference	Reference	Reference	Reference	Reference	Reference	Reference	Reference	Reference	Reference	Reference
1	-	-	-	-	-	-	-	4829 0602	-	4829 0603	4829 0601
3	4829 0580	4829 0581	4829 0582	4829 0595	4829 0583	4829 0584	4829 0606	4829 0607	4829 0608	4829 0609	-
4	-	-	-	4829 0596	4829 0588	4829 0589	-	-	-	-	-
6	4829 0590	4829 0591	4829 0592	4829 0597	4829 0593	4829 0594	-	-	-	-	-