



COUNTIS *E41/E42*

Three-phase Energy meter Measure
via CT up to 12 000A - Pulse

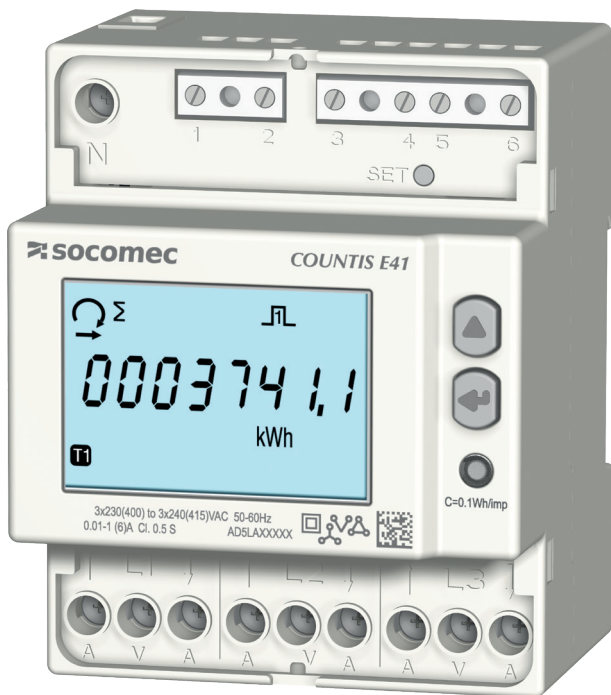

COUNTIS E41

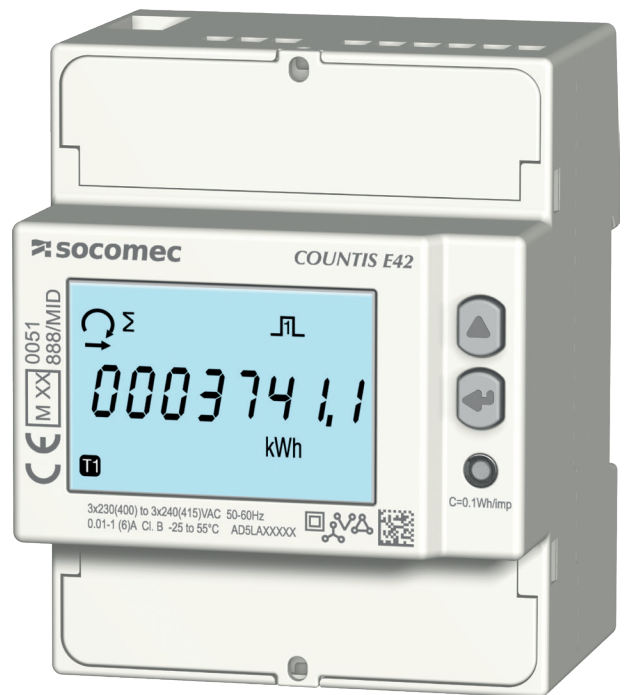


COUNTIS E42 - MID

1. DOCUMENTATION	3
2. HAZARDS AND WARNINGS	4
2.1. Risk of electrocution, burns or explosion	4
2.2. Risk of damaging the unit	4
2.3. Responsibility	4
3. PRELIMINARY OPERATIONS	5
4. INTRODUCTION	6
4.1. Introducing the COUNTIS E41/E42	6
4.2. Functions	6
4.3. Front panel	6
4.4. LCD display	7
4.5. Dimensions	7
4.6. Electrical values measured	8
4.6.1. Measurements	8
4.6.2. Energy balance definition	8
5. INSTALLATION	9
5.1. Recommendations and safety	9
5.2. DIN rail mounted	9
6. CONNECTION	10
6.1. Connecting the COUNTIS E41/E42	10
6.2. Connection to the electrical network and to the loads	11
7. MID COMPLIANCE	12
8. CONFIGURATION	13
8.1. Onscreen configuration	13
8.1.1. Detailed view of menu "SETUP 1"	14
8.1.2. View all of the menu "SETUP 2"	15
8.1.3. Detailed view of menu "SETUP 2"	15
9. USE	16
9.1. Detailed view of the menu for tariff 1, "Tar.1"	17
9.2. Detailed view of the menu for tariff 2, "Tar.2"	18
9.3. Detailed view of the total menu, "tot"	19
9.4. Detailed view of the menu showing partial readings and the energy balance "Par.b"	20
9.4.1. Starting up the partial energy meter	21
9.4.2. Stopping the partial energy meter	21
9.4.3. Resetting the partial energy meter to zero	21
9.5. Detailed view of the menu for realtime readings, "rt"	22
9.6. Detailed view of the menu "info"	23
10. DIAGNOSTICS MESSAGES	24
10.1. Missing phases	24
10.2. Reversed phases	24
10.3. Malfunction	24
11. ASSISTANCE	25
12. CHARACTERISTICS	26
13. GLOSSARY OF ABBREVIATIONS	29

1. DOCUMENTATION

All documentation on the COUNTIS E41/E42 is available on our website at the following address:

www.socomec.com/en/countis-e4x

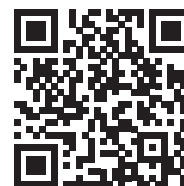

2. HAZARDS AND WARNINGS

The term "device" used in the paragraphs below refers to the COUNTIS E41/E42.

The assembly, use, servicing and maintenance of this equipment must only be carried out by trained, qualified professionals. SOCOMEC shall not be held responsible for failure to comply with the instructions in this manual.

2.1. Risk of electrocution, burns or explosion

- This device must only be installed and serviced by qualified personnel who have in-depth knowledge of installing, commissioning and operating the device and who have had appropriate training. He or she should have read and understood the various safety measures and warnings stated in the instructions.
- Before carrying out any work on the unit, switch off the voltage inputs.
- Always use an appropriate voltage detection device to confirm the absence of voltage.
- Replace all devices, doors and covers before turning on power to this equipment.
- Always power the device with the correct rated voltage.
- Install the unit following the recommended installation instructions and in a suitable electrical cabinet.

Failure to take these precautions could cause death or serious injuries.

2.2. Risk of damaging the unit

To ensure that the unit operates correctly, make sure that:

- The unit is correctly installed.
- There is a maximum voltage at the voltage input terminals of 288 VAC phase-neutral
- The network frequency indicated on the device is observed: 50 or 60 Hz.
- There is a maximum current of 6 A at the current input terminals (I1, I2 and I3).

Failure to respect these precautions could cause damage to the unit.

2.3. Responsibility

- Assembly, connection and use must be carried out in accordance with the installation standards currently in force.
- The unit must be installed in accordance with the rules given in this manual.
- Failure to observe the rules for installing this unit may compromise the device's intrinsic protection.
- The unit must be positioned within an installation which complies with the standards currently in force.
- Any cable which needs to be replaced may only be replaced with a cable having the correct rating.

3. PRELIMINARY OPERATIONS

To ensure the safety of staff and the equipment, it is vital to read and absorb the contents of these instructions thoroughly before commissioning.

Check the following points as soon as you receive the package containing the unit:

- The packaging is in good condition
- The unit has not been damaged during transportation
- The device reference number conforms to your order
- The package includes:
 - 1 device
 - 1 sealing kit (for COUNTIS E42)
 - 1 Quick Start Guide

4. INTRODUCTION

4.1. Introducing the COUNTIS E41/E42


The COUNTIS E41/E42 are modular active and reactive electrical energy meters that displays consumed and produced energy. They are designed for three-phase networks and can be connected using a CT 1/5 A on installations up to 12000 A.

4.2. Functions


- Measures and displays bidirectional total and partial energy
- Dual tariff management: T1 / T2
- Pulse output
- Electrical parameter measurements: I, U, V, f
- Bidirectional Power, power factor
- MID

DESCRIPTION	REFERENCE
COUNTIS E41	4850 3063
COUNTIS E42	4850 3064

4.3. Front panel

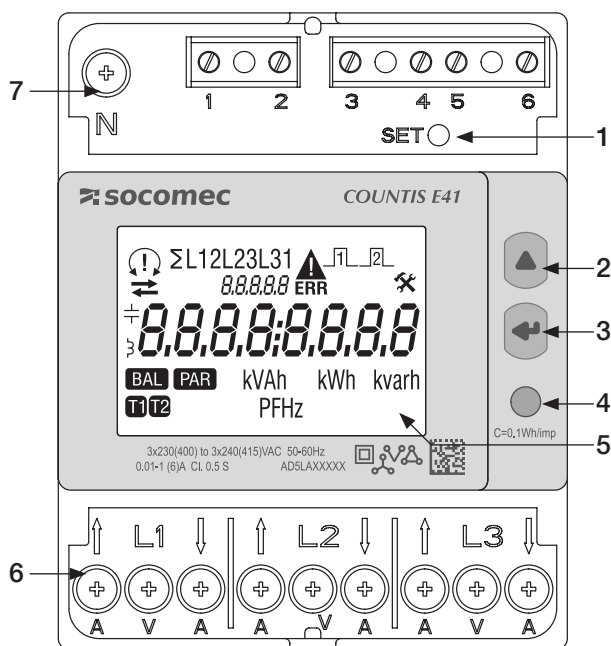


1. SET button
2. UP button
3. ENTER key
4. Metrological LED
5. LCD display
6. Current and voltage terminals
7. Neutral connection

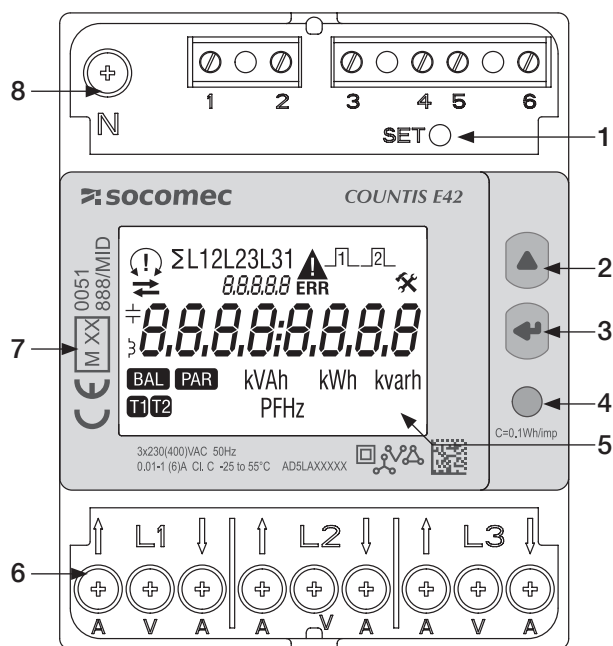

1. SET button
2. UP button
3. ENTER key
4. Metrological LED
5. LCD display
6. Current and voltage terminals
7. Information relating to MID certification
8. Neutral connection


4.4. LCD display

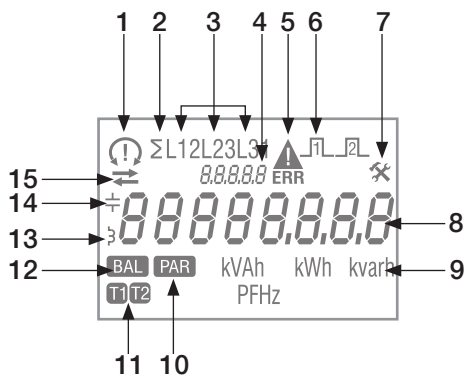

1. Phase sequences:
 - ⌚ 132
 - ⌚ 123
 - ⚡ one or multiple phases are not detected
2. System value
3. Value by phase
4. Different meanings according to the shown item:
 - CT XXXX: CT ratio value
 - SEC: secondary value shown in the main area
 - SEtUP: Setup page
 - InFO: Info page
5. Device malfunction. Replace the device
6. Active pulse output
7. Setup menu
8. Main zone
9. Measurement Unit
10. Partials meters. Flashing = partial meter has stopped
11. Tariff display
12. Energy balance
13. Inductive value
14. Capacitive value
15. Imported (→) or exported energy or power (←)

4.5. Dimensions

Dimensions: in/mm

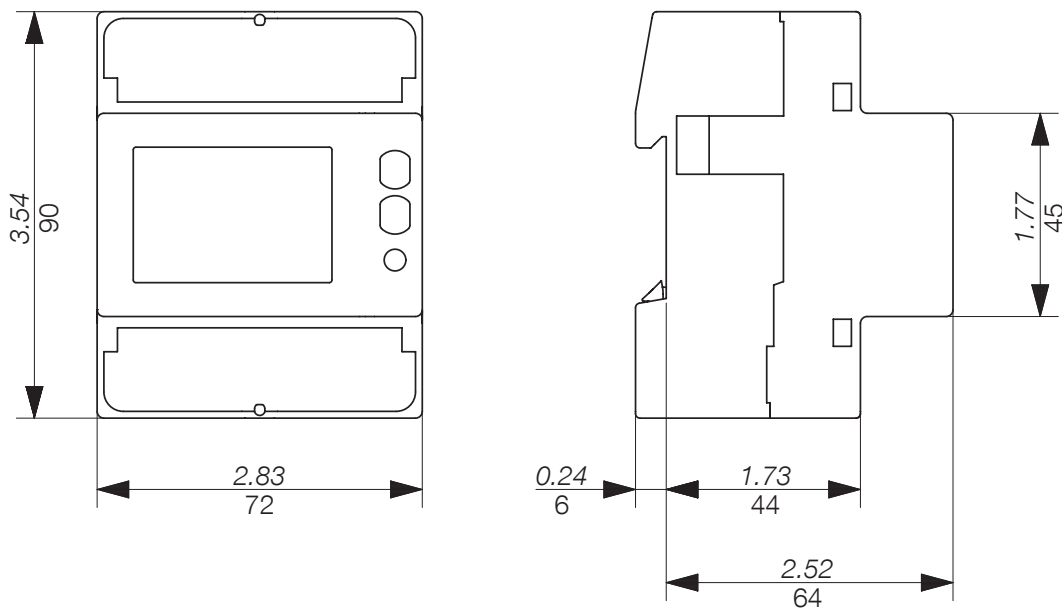

4.6. Electrical values measured

4.6.1. Measurements

Settings vary by model.

REALTIME VALUES	SYMBOL	MEASUREMENT UNIT	LCD DISPLAY
Phase to neutral voltage	$\sum V$	V	●
Phase to phase voltage	$\sum U$		●
Current	$\sum I$	A	●
Power factor	$\sum PF$		●
Apparent power	$\sum S, S1, S2, S3$	kVA	●
Active power	$\sum P, P1, P2, P3$	kW	●
Reactive power	$\sum Q, Q1, Q2, Q3$	kVAr	●
Frequency	f	Hz	●
Phase sequence	CW / CCW		●
Power direction	\rightleftharpoons		●
LOGGED DATA			
Total active and reactive energy	E_a, E_r (\sum & par phase)	kWh, kvarh	●
Total apparent energy	E_{ap} (\sum)	kVAh	●
Total inductive and capacitive reactive energy	E_r (\sum)	kvarh	●
Total active, reactive energy for each tariff (T1/T2)	E_a, E_r (\sum)	kWh, kvarh	●
Total reactive, inductive and capacitive energy for each tariff (T1/T2)	E_r (\sum)	kvarh	●
Active, partial energy for each tariff (T1/T2)	E_a (\sum)	kWh	●
Active, reactive and apparent partial energy	E_a, E_r, E_{ap} (\sum)	kWh, kvarh, kVAh	●
Energy balance	\sum	kWh, kvarh	●
MISCELLANEOUS			
Present tariff	T	1/2	●
Partial counters	BY	START/STOP	●
Pulse output status	$\square \square \square$	Active / Not active	●

i **Note:** \sum is the sum of the meter readings for each phase, divided by 3.

i **Note:** if you have a 3-wire connection the following voltage readings are not available; phase-neutral, neutral current, phase power, power factor for each phase and power for each phase.

4.6.2. Energy balance definition

	FORMULA
kWh	(+kWh T1) – (-kWh T1) + (+kWh T2) – (-kWh T2)
kvarh	(+kvarh T1) – (-kvarh T1) + (+kvarh T2) – (-kvarh T2)

5. INSTALLATION

The paragraphs below describe how to install the device.

5.1. Recommendations and safety

Refer to the safety instructions (section "2. Hazards and warnings", page 4)


- Keep away from electromagnetic interference generator systems,
- Avoid vibrations with accelerations greater than 1 g for frequencies lower than 60 Hz.

5.2. DIN rail mounted

The COUNTIS E41/E42 can be mounted on a 35-mm DIN rail (EN 60715TM35). It must be used inside electrical cabinets.

6. CONNECTION

6.1. Connecting the COUNTIS E41/E42

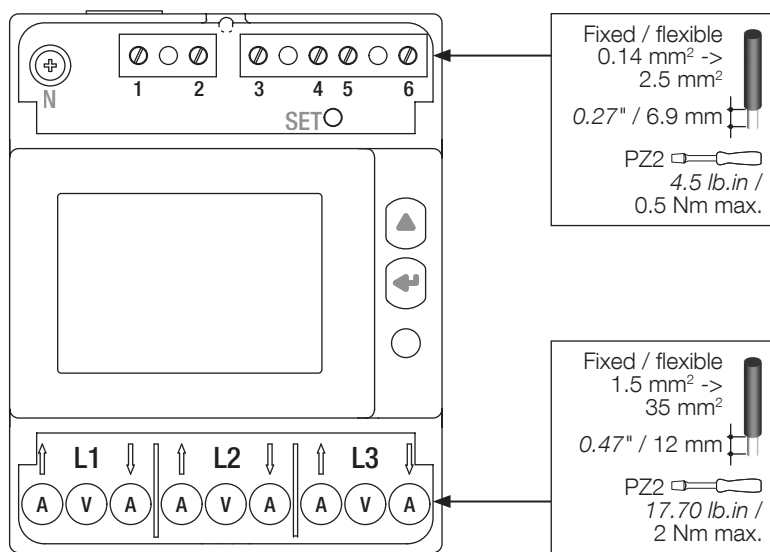


6.2. Connection to the electrical network and to the loads

The COUNTIS E41/E42 are intended for three-phase networks with or without neutral.



The earthing of CT secondary is **forbidden** in IT earthing system ; it is optional in TT/TN earthing system.

3 phases, 4 wires, 3 CT

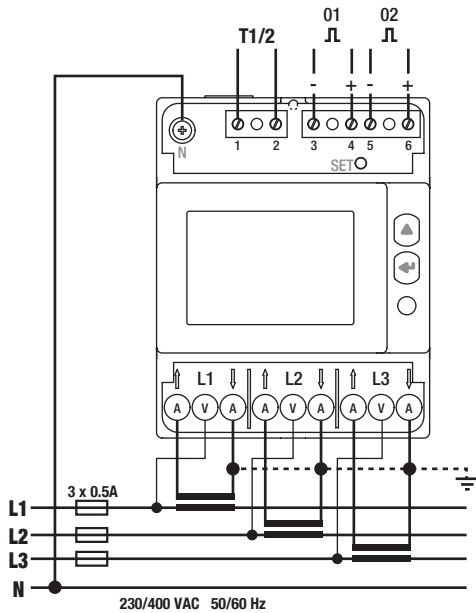

Double tariff

1-2: Switch tariffs:

0 VAC/DC -> Tariff 1

80-276 VAC/DC -> Tariff 2

Pulse output 1

3-4: Ea+

Pulse output 2

5-6: Er+

Optocoupler pulse output 250VAC/DC (100mA)

Mains

L1 A: Current input/output

L1 V: Voltage input

L2 A: Current input/output


L2 V: Voltage input

L3 A: Current input/output


L3 V: Voltage input

N: Neutral connection

3 phases, 3 wires, 3 CT

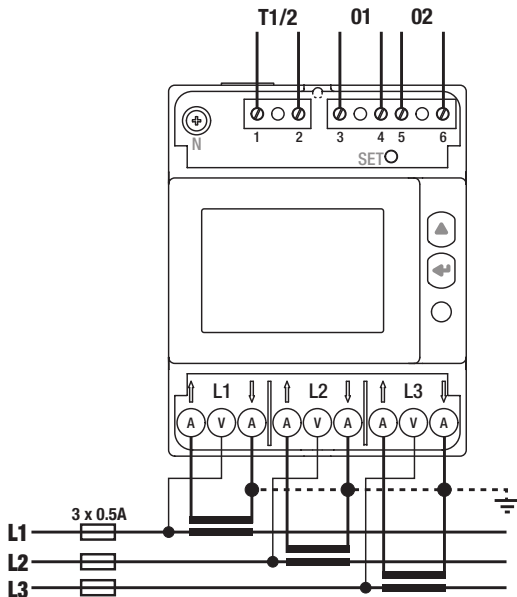

3 phases, 3 wires, 2 CT

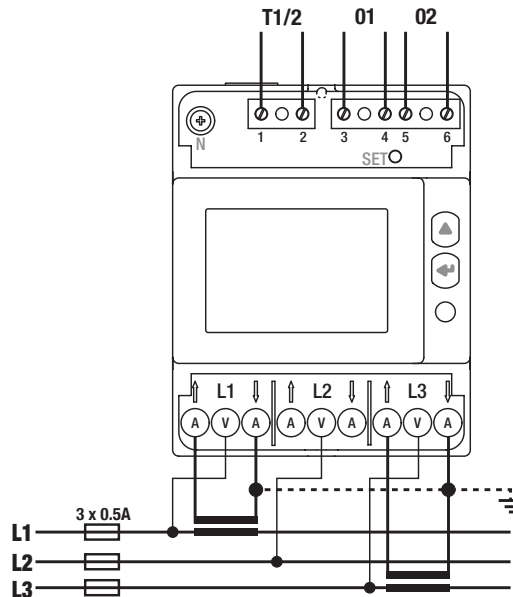

7. MID COMPLIANCE

The following points must be taken into consideration to ensure that the device is used in compliance with directive MID 2014/32/EU:

- **Type of network**

The COUNTIS E42 meter complies with the MID directive for connection to networks: 3P+N and 3P (see "6.2. Connection to the electrical network and to the loads", page 11)

- **Fitting terminal covers**



After connecting the device, ensure that the terminal covers are fitted properly and secured by the plastic seals provided with the device.

- **Locking the program button**

Make sure the SET program button is locked after fitting the terminal cover.

- **MID Declaration of Conformity**

The MID Declaration of Conformity is available on the website: www.socomec.com/en/countis-e4x

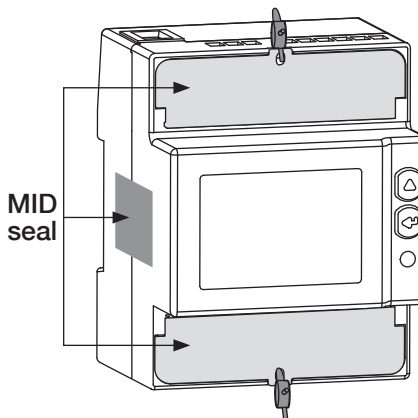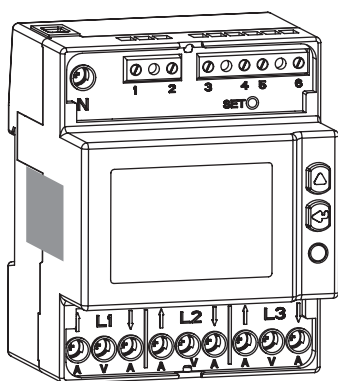











8. CONFIGURATION

The device can be configured directly from the COUNTIS E41/E42 screen in programming mode.

8.1. Onscreen configuration

From the screen, go to programming mode to reset partial energy to zero. How to browse through the programming mode is described in the following stages:


FUNCTION	WHERE	BUTTONS	PRESS
Switch menus	Every page with the exception of SETUP 1/2		Realtime
Switch pages within a menu	Every page within a menu		Realtime
Go to menu SETUP 2	Menu page SETUP		> 3 sec
Go to menu SETUP 1	Every page with the exception of SETUP 1	SET	> 3 sec
Exit menu SETUP 1/2	Menu SETUP 1/2		> 3 sec
Start/stop the displayed partial meter	Partial meter menu	 + 	Realtime
Reset the displayed partial meter to zero	Partial meter menu	 + 	> 3 sec
Display test	Every page with the exception of SETUP 1/2	 + 	> 10 sec

8.1.1. Detailed view of menu "SETUP 1"

In menu "SETUP 1" you can select the connection type and configure the primary and secondary of the current transformers.

Press SET for 3 seconds using a screwdriver to put the device into programming mode.

The default connection (Wir) is: 3.4.3 = 3 phases, 4 wires, 3 CT. Other possible connections: 3.3.3 = 3 phases, 3 wires, 3 CT or 3.3.2 = 3 phases, 3 wires, 2 CT

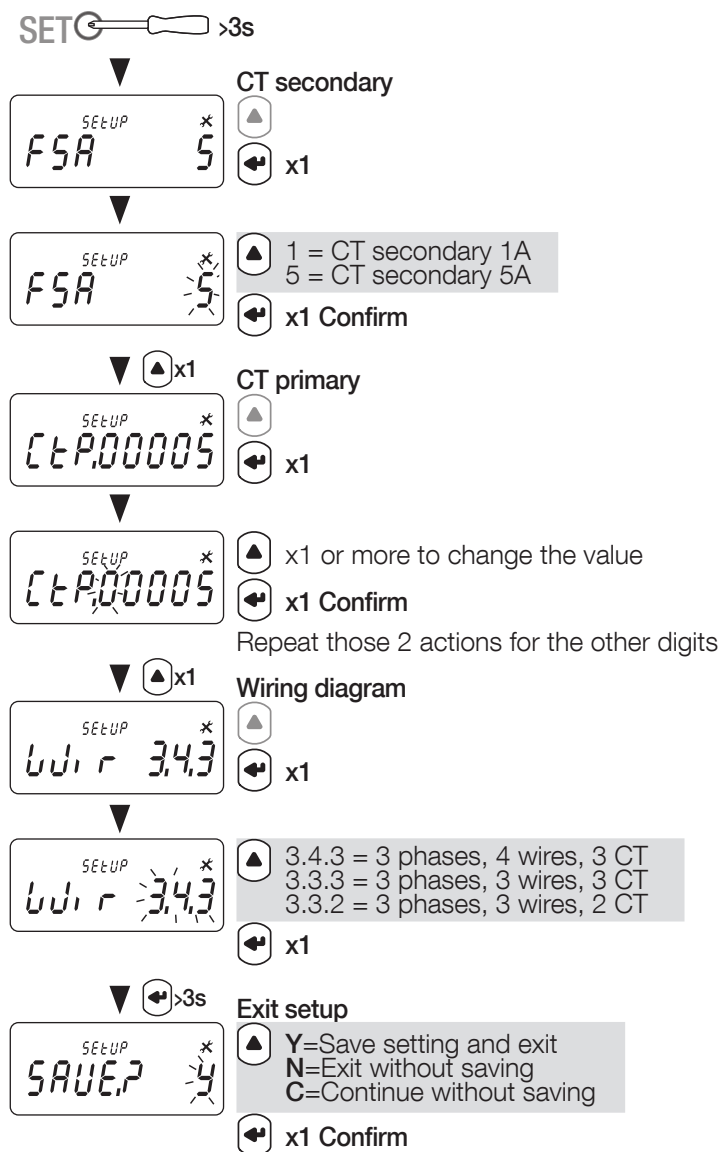

8.1.2. View all of the menu "SETUP 2"

In the SETUP 2 menu, press "⏪" for 3 seconds to put the device into programming mode.

You can go to the different screens by pressing "⏩":



Reset partial energy to zero:
Ea+ partial (kWh) Tariff T1, T2
Ea+ partial (kWh)
Ea- partial (kWh) Tariff T1, T2
Ea- partial (kWh)
Eap partial (kVAh)
Er+ partial (kVarh)
Er- partial (kVarh)

Return to the first menu screen, "SETUP 2"

8.1.3. Detailed view of menu "SETUP 2"





Reset energies



Ea+ partial Tariff T1, T2; Ea+ partial;
Ea- partial Tariff T1, T2; Ea- partial;
Eap partial; Er+ partial; Er- partial

Return to the first menu screen, "SETUP 2"

9. USE

Switch menus by pressing "". Press "" to see the electrical readings or information within a menu.

The menus and related measurements are described in the table below:

Tariff 1 (Tar.1)	Tariff 2 (Tar.2)	Total (tot)	Partial readings and energy balance (Par.b)	Realtime values (rt)	Information (inFo)
Tariff 1 - Imported and exported active energy	Tariff 2 - Imported and exported active energy	Total imported and exported active energy	Partial imported active energy by tariff	Active, apparent and reactive power	Metrological firmware version
Tariff 1 - Imported and exported inductive reactive energy	Tariff 2 - Imported and exported inductive reactive energy	Total apparent energy	Partial imported active energy	Phase/phase and phase/neutral voltage	Non-metrological firmware version
Tariff 1 - Imported and exported capacitive reactive energy	Tariff 2 - Imported and exported capacitive reactive energy	Total imported and exported inductive reactive energy	Partial exported active energy by tariff	Three-phase current	Checksum of metrological firmware
Tariff 1 - Imported and exported reactive energy	Tariff 2 - Imported and exported reactive energy	Total imported and exported capacitive reactive energy	Partial exported active energy	Power factor	Checksum of non-metrological firmware
Go back to first screen, menu "Tar.1"	Go back to first screen, menu "Tar.2"	Total imported and exported reactive energy	Partial apparent energy	Frequency	Connection type
		Go back to first screen, menu "tot"	Partial imported and exported reactive energy	Go back to first screen, menu "rt"	Go back to first screen, menu "info"
			Active energy balance		
			Reactive energy balance		
			Go back to first screen, menu "Par.b"		

9.1. Detailed view of the menu for tariff 1, "Tar.1"

Imported active energy, tariff 1	
$\int_{\Sigma}^{t_{RR,1}}$ 000006.22 kWh	

Exported active energy, tariff 1	
$\int_{\Sigma}^{t_{RR,1}}$ 000006.22 kWh	

Imported inductive reactive energy, tariff 1	
$\int_{\Sigma}^{t_{RR,1}}$ 000006.22 kvarh	

Exported inductive reactive energy, tariff 1	
$\int_{\Sigma}^{t_{RR,1}}$ 000006.22 kvarh	

Imported capacitive reactive energy, tariff 1	
$\int_{\Sigma}^{t_{RR,1}}$ 000006.22 kvarh	

Exported capacitive reactive energy, tariff 1	
$\int_{\Sigma}^{t_{RR,1}}$ 000006.22 kvarh	

Imported reactive energy, tariff 1	
$\int_{\Sigma}^{t_{RR,1}}$ 000006.22 kvarh	

Exported reactive energy, tariff 1	
$\int_{\Sigma}^{t_{RR,1}}$ 000006.22 kvarh	

Go back to first screen, menu "Tar.1"

9.2. Detailed view of the menu for tariff 2, "Tar.2"

Imported active energy, tariff 2	
$\int_{\Sigma}^{t_{RR,2}}$ 000006.22 kWh	

Exported active energy, tariff 2	
$\int_{\Sigma}^{t_{RR,2}}$ 000006.22 kWh	

Imported inductive reactive energy, tariff 2	
$\int_{\Sigma}^{t_{RR,2}}$ 000006.22 kvarh	

Exported inductive reactive energy, tariff 2	
$\int_{\Sigma}^{t_{RR,2}}$ 000006.22 kvarh	

Imported capacitive reactive energy, tariff 2	
$\int_{\Sigma}^{t_{RR,2}}$ 000006.22 kvarh	

Exported capacitive reactive energy, tariff 2	
$\int_{\Sigma}^{t_{RR,2}}$ 000006.22 kvarh	

Imported reactive energy, tariff 2	
$\int_{\Sigma}^{t_{RR,2}}$ 000006.22 kvarh	

Exported reactive energy, tariff 2	
$\int_{\Sigma}^{t_{RR,2}}$ 000006.22 kvarh	

Go back to first screen, menu "Tar.2"

9.3. Detailed view of the total menu, "tot"

Total imported active energy	
Ω_{L1}^{tot} 000008.32 kWh	L1, L2, L3, Σ

Total exported active energy	
Ω_{L1}^{tot} 000008.32 kWh	L1, L2, L3, Σ

Total apparent energy	
Ω_{Σ}^{tot} 000008.32 kVAh	Σ

Total imported inductive reactive energy	
Ω_{Σ}^{tot} 000008.32 kvarh	Σ

Total exported inductive reactive energy	
Ω_{Σ}^{tot} 000008.32 kvarh	Σ

Total imported capacitive reactive energy	
Ω_{Σ}^{tot} +000008.32 kvarh	Σ

Total exported capacitive reactive energy	
Ω_{Σ}^{tot} +000008.32 kvarh	Σ

Total imported reactive energy	
Ω_{L1}^{tot} 000008.32 kvarh	L1, L2, L3, Σ

Total exported reactive energy	
Ω_{L1}^{tot} 000008.32 kvarh	L1, L2, L3, Σ

Go back to first screen, menu "tot"


9.4. Detailed view of the menu showing partial readings and the energy balance "Par.b"

Imported partial active energy for tariff T1	
$\text{Q}_{\Sigma}^{\text{PAR},b}$ 000008.54 Σ kWh	
Imported partial active energy for tariff T2	
$\text{Q}_{\Sigma}^{\text{PAR},b}$ 000008.54 Σ kWh	
Partial imported active energy	
$\text{Q}_{\Sigma}^{\text{PAR},b}$ 000008.54 Σ kWh	
Exported partial active energy for tariff T1	
$\text{Q}_{\Sigma}^{\text{PAR},b}$ 000008.54 Σ kWh	
Exported partial active energy for tariff T2	
$\text{Q}_{\Sigma}^{\text{PAR},b}$ 000008.54 Σ kWh	
Partial exported active energy	
$\text{Q}_{\Sigma}^{\text{PAR},b}$ 000008.54 Σ kWh	
Partial apparent energy	
$\text{Q}_{\Sigma}^{\text{PAR},b}$ 000008.54 Σ kVAh	


Partial imported reactive energy	
$\text{Q}_{\Sigma}^{\text{PAR},b}$ 000008.54 Σ kvarh	
Partial exported reactive energy	
$\text{Q}_{\Sigma}^{\text{PAR},b}$ 000008.54 Σ kvarh	
Active energy balance	
$\text{Q}_{\Sigma}^{\text{BAL},b}$ 000008.54 kWh	
Reactive energy balance	
$\text{Q}_{L1}^{\text{PAR},b}$ 000008.32 kvarh	

Go back to first screen, menu "Par.b"


9.4.1. Starting up the partial energy meter

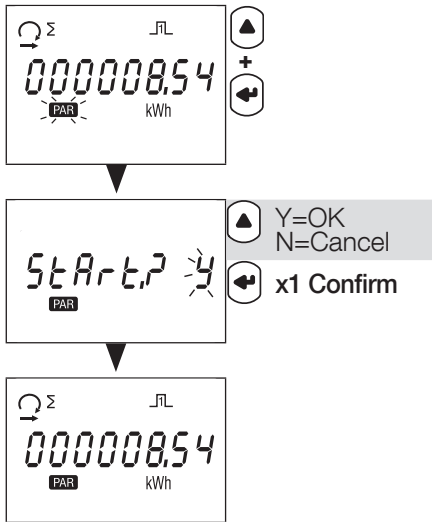

9.4.2. Stopping the partial energy meter

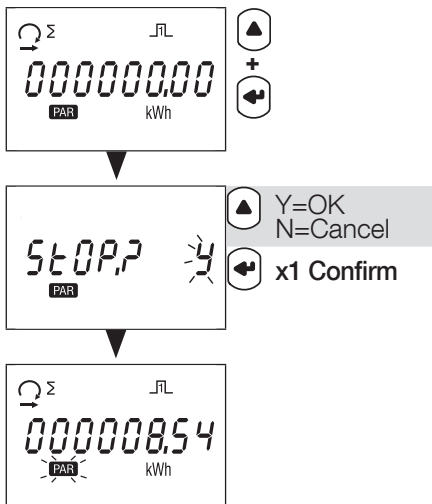

9.4.3. Resetting the partial energy meter to zero

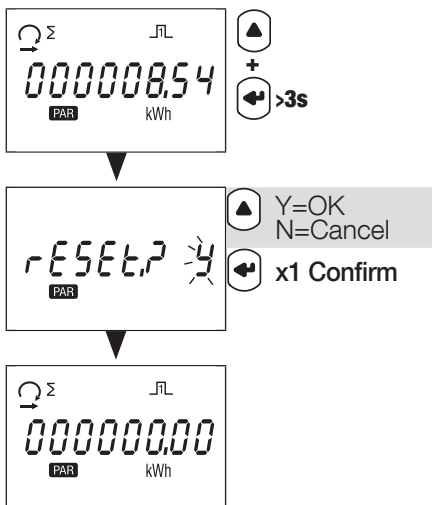

9.5. Detailed view of the menu for realtime readings, "rt"

Realtime active power	
\odot_{L1}^{rt} 1150 kW	L1, L2, L3, Σ

Realtime apparent power	
\odot_{L1}^{rt} 1150 kVA	L1, L2, L3, Σ

Realtime reactive power	
\odot_{L1}^{rt} 1150 kvar	L1, L2, L3, Σ

Realtime phase/phase voltage	
$\odot_{\Sigma L12\ 23\ 31}^{rt}$ 1513 V	Σ

Realtime phase/neutral voltage	
$\odot_{\Sigma L1\ 2\ 3}^{rt}$ 075,7 V	Σ


Realtime three-phase current	
\odot_{Σ}^{rt} 69,67 A	Σ


Realtime power factor	
\odot_{Σ}^{rt} 0,800 PF	Σ


Frequency	
\odot_{Σ}^{rt} 50,00 Hz	


Go back to first screen, menu "rt"


9.6. Detailed view of the menu "info"

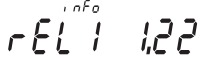
Metrological firmware version	
	

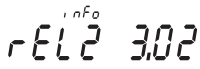
Non-metrological firmware version	
	

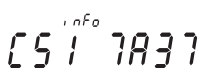Checksum of metrological firmware	
	

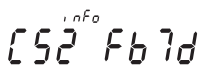Checksum of non-metrological firmware	
	

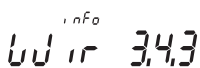Connection type	
	3 phases, 4 wires, 3 CT 3 phases, 3 wires, 3 CT 3 phases, 3 wires, 2 CT

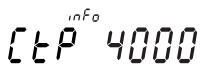CT primary value (CtP)	
	1...12000 A

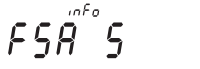CT secondary value (FSA)	
	1 or 5 A

 Go back to first screen, menu "info"

10. DIAGNOSTICS MESSAGES

The following messages appear if there are connection or malfunction errors.



10.1. Missing phases




- If one or several phases are not detected, the exclamation point  flashes on the screen. Example: phase not detected

10.2. Reversed phases



- If a 123 phase sequence is detected, the  symbol appears.
- If a 132 phase sequence is detected, the  symbol appears.

10.3. Malfunction

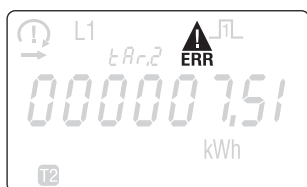

- If you see this message, the meter has malfunctioned and must be replaced.

11. ASSISTANCE

CAUSES	SOLUTIONS
Device not working	Check the neutral and phase 1 cable connections.
Phases not shown onscreen	Check the connections
Phases reversed onscreen	Check the network configuration
Error message	Check the meter is working OK

12. CHARACTERISTICS

GENERAL FEATURES	
Compliant with	European EMC Directive No. 2014/30/EU dated 26/02/2014 LV Directive No. 2014/35/EU dated 26/02/2014 Measuring Instrument Directive MID No. 2014/32/EU dated 26/02/2014 EN50470-1/-3 IEC 62053-21/-23
Frequency	MID model: 50 Hz \pm 1 Hz Non MID model: 50/60 Hz \pm 1 Hz
Power supply	Self-supplied
Rated dissipated power (Wmax.)	7.5VA (0.5W)
OPERATING FEATURES	
Three-phase connectivity	3/4 wires MID model: 3x 230/400 V Non MID model: 3x 230/400 V to 3x 240/415 V
Stores energy readings and settings	In FRAM memory
Identifies display of tariffs	T1 and T2
CURRENT MEASUREMENTS	
Type	via current transformers
CT burden (for each phase)	0,04 VA
Startup current (Ist)	2mA (Class 1) 1mA (Class C)
Minimum current (Imin)	0.10 A
Transition current (Itr)	50mA
Reference current (Iref)	1 A
Maximum current (Imax)	6 A
CURRENT TRANSFORMER AND FSA	
Minimum CT primary	1
Maximum CT primary	12000
CT Secondary	1 or 5 A
OVERLOAD CAPACITY	
Voltage Un continuous	288 VAC
Voltage Un momentary (1 s)	300 VAC
Current Imax continuous	6 A
Current Imax momentary	20 Imax for 0.5 s
VOLTAGE MEASUREMENTS	
Consumption	3.5VA max. per phase
Permanent max. voltage	290V phase-neutral / 500V phase-phase
FREQUENCY MEASUREMENT	
Frequency measurement	45-65 Hz
ENERGY MEASUREMENT	
Active	Yes
Reactive	Yes
Total and partial reading	Yes
MID metering	Bidirectional with three-phase
Resolution	10 Wh, 10 varh

ENERGY ACCURACY	
Active energy Ea+	Class C (EN 50470-3) Class 1 (EN 62053-21)
Reactive energy Er+	Class 2 (EN 62053-23)
TARIFF FOR Ea+	
Tariff management	Yes (via input)
Number of tariffs managed	2
Tariff input	Yes
Input type	Opto-isolated
Voltage	0V --> Tariff 1 80-276 VAC-DC --> Tariff 2
METROLOGICAL LED (Ea+, Ea-)	
Pulse value	1000 pulses / kWh
Colour	Red
PULSE OUTPUT	
Type	Opto-isolated - 250 VAC/DC 100mA according to EN 62053-31
Pulse weight according to the set CT ratio	1 Wh → CT = 1 ... 4 5 Wh → CT = 5 ... 24 25 Wh → CT = 25 ... 124 125 Wh → CT = 125 ... 624 1000 Wh → CT = 625 ... 3124 10000 Wh → CT = 3125 ... 12000
S0-1	Ea+
S0-2	Er+
DISPLAY	
Type	8-digit LCD with backlight
Refresh time	1 s
Backlight activation time	10 s
Active energy: 1 display, 8-digit	00000.000 kWh ... 999999.99 MWh
Reactive energy: 1 display, 8-digit	00000.000 kvarh ... 999999.99 Mvarh
Apparent energy: 1 display, 8-digit	00000.000 kVAh ... 999999.99 MVAh
Instantaneous active power: 1 display, 4-digit	0.000 kW ... 99.99 MW
Instantaneous reactive power: 1 display, 4-digit	0.000 kvar ... 99.99 Mvar
Instantaneous apparent power: 1 display, 4-digit	0.000 kVA ... 99.99 MVA
Instantaneous voltage: 1 display, 4-digit	000.0 ... 999.9 V
Instantaneous current: 1 display, 4-digit	0.000 ... 99.99 kA
Power factor: 1 display, 4-digit	0.000 ... 1.000
Frequency: 1 display, 4-digit	45.00-65.00 Hz
SAVING	
Energy registers	In FRAM memory

ENVIRONMENTAL CONDITIONS	
Mechanical environment	M1
Electromagnetic environment	E2
Operating temperature range	-25° C to +55° C
Storage temperature	-25° C to +75° C
Humidity	≤ 80%
Installation	Internal (box/cabinet)
Vibrations	±0.075 mm
HOUSING	
Dimensions W x H x D (mm)	Modular - width of 4 modules (DIN 43880) 72 x 90 x 64
Mounting	On DIN rail (EN 60715)
Connection capacity, tightening torque	See chapter "6. Connection", page 10
Protection index	Front: IP51 - casing: IP20
Insulation class	Class II (EN 50470-1)
Weight	440 g

13. GLOSSARY OF ABBREVIATIONS

info	Menu information
rEL1	Metrological firmware version
rEL2	Non-metrological firmware version
CS1	Checksum of metrological firmware
CS2	Checksum of non-metrological firmware
tAr.1	Menu for Tariff 1
tAr.2	Menu for Tariff 2
tot	Total menu
PAr.b	Partial readings and energy balance menu
rt	Realtime values menu
SEtuP.2	Setup 2 menu
rES	Reset partial energy
ConF?	Confirm selection
Y	Save and exit
N	Exit without saving
C	Continue without saving

CORPORATE HQ CONTACT:
SOCOMECSAS
1-4 RUE DE WESTHOUSE
67235 BENFELD, FRANCE

www.socomec.com

